LAVATHERM 59800

Condenser Dryer with Heat Pump

User information

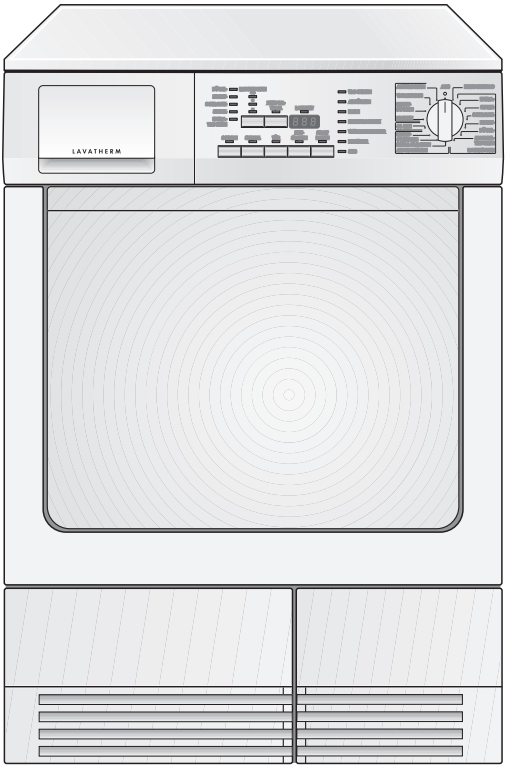

Dear Customer,

Please read this user information carefully and keep it to refer to later. Please pass the user information on to any future owner of the appliance.

The following symbols are used in the text:

Safety instructions
Warning! Information that affects your personal safety.
Important! Information that prevents damage to the appliance.

Useful tips and hints

Environmental information

Contents

Operating Instructions 5

Safety 5

Disposal 6

Environmental tips 7

Description of machine 8

Operating screen 8

Before the first drying cycle 9

Sorting and preparing laundry 9

Programme overview 10

Drying 12
Switching machine on / switching light on 12
Opening loading door / loading laundry 12
Selecting the programme 12
Selecting additional functions 13
Setting time delay 14
Starting the programme 14
Changing programme 14
Removing laundry or loading laundry when necessary 15
Drying cycle complete / removing laundry 15

Cleaning and maintenance 16
Cleaning lint filter 16
Cleaning the door seal 17
Emptying the water reservoir 17
Cleaning the fluff filter 18
Cleaning the drum 20
Clean operating screen and housing 20

What to do if 21
Troubleshooting by yourself 21
Changing the bulb for interior lighting 22

Programming options 23

Technical data 24

Consumption values 24

Installation and connection instructions 25
Installation safety instructions 25
Transporting the appliance 25
Removing transport safety packaging 26
Electrical connection 26
Door reversal instructions 28
Special accessories 29
Warranty conditions 30
Service and Spare Parts 31

⚠ Safety

Prior to initial start up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect a damaged machine. If parts are damaged, contact your supplier.

Intended use

- The dryer is intended for drying standard laundry in domestic environments.
- Conversions or modifications to the dryer are not permitted.
- The laundry must not contain flammable solvents (benzene, alcohol, stain remover, etc.) . Risk of fire and/or explosion! Laundry which has come into contact with such substances must be rinsed thoroughly by hand before drying.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place items of laundry in the dryer which contain foam rubber or materials similar to rubber. Risk of fire!
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Ensure that explosive objects (e.g. cigarette lighters, spray cans, etc.) do not enter the dryer with the laundry. Risk of fire and/or explosion!
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Do not use the machine if there are no lint filters or if these are damaged. Risk of fire!
- Clean the fluff filter behind the base door regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.
- The lampcover for the interior light must be screwed down tightly.

Child safety

- Keep packaging away from children. Risk of suffocation!
- Children can often not see the dangers associated with electrical appliances. Never leave unsupervised children near the dryer.
- Ensure that children and small animals cannot climb into the dryer's drum. Risk of death! Keep the dryer door shut whenever it is not being used.

General safety

- Only our qualified engineers may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or remove the fuse.
- Disconnect the machine from the power supply when it is not in use.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Adapter plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

Disposal

Packaging material
The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.

Old appliance

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

The heat pump of your dryer contains a closed refrigerant circuit filled with a refrigerant which is free from fluoro-chloro-hydrocarbons. The refrigerant circuit in the heat pump must not be damaged.

Warning! When your appliance has finished it's working life, remove the plug from the mains socket. Cut off the cable and plug and dispose of them.

Destroy the door lock. This prevents children from trapping themselves inside and endangering their lives.

Environmental tips

- Your dryer will function most economically if you:
  - always keep the ventilation slots on the base of the dryer unobstructed;
  - use the loading volumes specified in the programme overview;
  - ensure you have good ventilation in the installation room;
  - clean the micro-fine filter and fine strainer after each drying cycle;
  - spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the COTTONS STORAGE DRY programme.

Pre-draining			Drying cycle
Revolutions per minute	Residual dampness		Energy in kWh
	in litres	as a %	
1000	3.6	60	2,1
1200	3.2	53	1,9
1400	3.0	50	1,8
1800	2.5	42	1,5

Description of machine

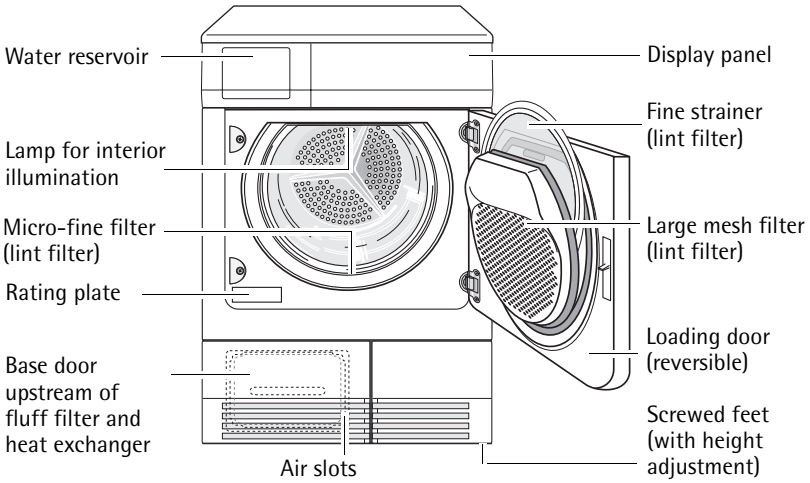

Operating screen

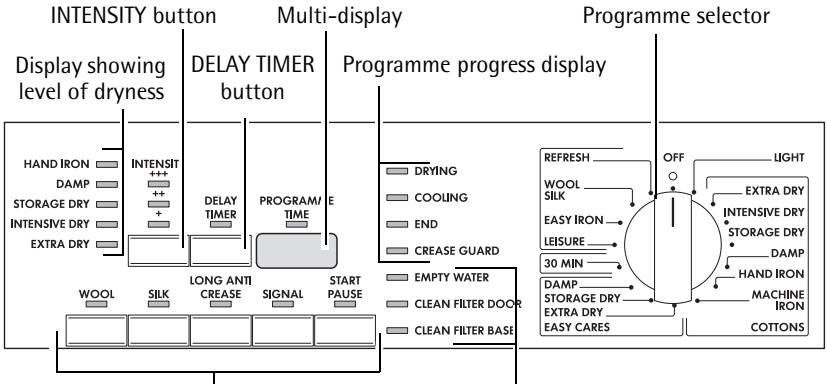

Block of buttons and displays

Maintenance displays
- EMPTY WATER (empty!)
- CLEAN FILTER DOOR (clean lint filter!)
- CLEAN FILTER BASE (clean lint filter!)

Before the first drying cycle

⚠ If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor. Otherwise the compressor could be damaged.

1. In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.

Sorting and preparing laundry

Sorting laundry

- Sorting by fabric type:
  – Cotton/linen for programmes in the COTTON programme group.
  – Mixed fibres and synthetics for programmes in the EASY CARES programme group.
- Sorting by care label. The care labels mean:

Drying in the tumble dryer possible in principle	Dry at normal temperature	Dry at reduced temperature	Drying in the tumble dryer **not** possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the EXTRA DRY programme. Items may shrink!
- Wool and wool-like textiles can be dried using the WOOL programme. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together which are similar or the same with repect to material, colour and weight. Please dry heavy laundry items made of wool separately.

Preparing laundry

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Programme overview

Programmes		max. load (weight when dry)	Additional functions			Application/properties	Care symbols
			INTENSITY	LONG ANTICREASE	SIGNAL		
COTTONS	EXTRA DRY	6 kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	
	INTENSIVE DRY	6 kg	•	•	•	Thorough drying of thick fabrics, e.g. terry towelling items, towels.	
	STORAGE DRY	6 kg	•	•	•	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	
	DAMP	6 kg	•	•	•	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	
	HAND IRON	6 kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	
	MACHINE IRON	6 kg	•	•	•	For cotton or linen laundry which is also to be machine pressed, e.g. bedding, table linen.	
EASY CARES	EXTRA DRY	3 kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	
	STORAGE DRY	3 kg	•	•	•	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	
	DAMP	3 kg	•	•	•	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	

Programmes	max. load (weight when dry)	Additional functions			Application/properties	Care symbols
		INTENSITY	LONG ANTICREASE	SIGNAL		
30 MIN	1 kg	-	•	•	For further drying of individual items of laundry or for small volumes of less than 1 kg.	
LEISURE	6 kg	•	•	•	Special programme for leisure clothing, such as jeans, sweatshirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	
EASY IRON	1 kg	-	•	•	Special programme with anti-crease mechanism for easy care fabrics such shirts and blouses; for minimum ironing effort. The result depends on the type of fabric and its finish. (The load corresponds to approx. 5 to 7 shirts.) Recommendation: Place fabrics in the dryer straight after spinning. Once dried, immediately remove fabrics and place on a clothes hanger.	
WOOL	1 kg	•	-	•	Special programme, for drying woollen fabrics after they have been washed, using warm air at minimum mechanical load (Follow section "Sorting and preparing washing"). Recommendation: Remove fabrics immediately after drying, as no anti-crease programme follows.	
SILK	1 kg	•	•	•	Special programme for drying silk using warm air and gentle movement.	
REFRESH	1 kg	-	-	•	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning products. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.)	

Drying

Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT. The machine has been switched on. When the door is opened, the drum is illuminated.

Opening loading door / loading laundry

1. Open loading door:
   Push against the loading door (push point)
2. Load your laundry (do not force it in/overload the machine).

Caution! Be careful not to trap laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

Selecting the programme

Use the programme selector to set the programme you require.
The probable programme run time is displayed (in minutes) on the multi-display.

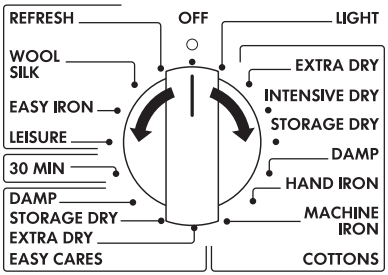

With the programme knob position WOOL/SILK, the desired programme can be selected with the WOOL or SILK buttons. If no button is pressed, the WOOL programme is automatically set.

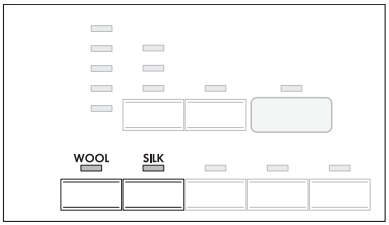

Selecting additional functions

INTENSITY

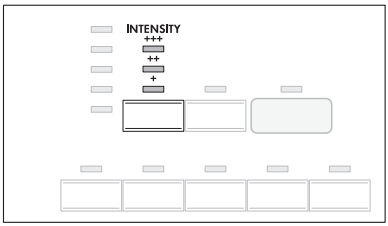

For precise setting of the residual moisture content of the laundry, the degrees of dryness +, ++ or +++ can be set in addition to most programmes. Laundry becomes drier from + to +++.

1. Press the INTENSITY button repeatedly until the light for the residual moisture required is lit.

In the programmes WOOL or SILK further drying can also be set by restarting the programmes with the residual moisture levels +, ++ or +++ set in addition, as required. In the case of a drying cycle with relatively dry laundry, the length of the programme cycle displayed at the beginning is corrected after a while.

Important: Do not over dry wool or silk.

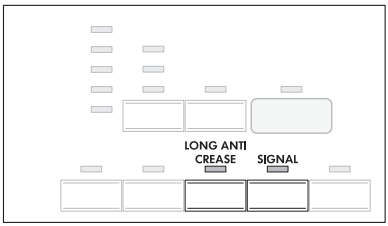

If required, press the LONG ANTICREASE or SIGNAL buttons.

LONG ANTICREASE

If this additional function is selected, the anti-crease phase at the end of the drying cycle is lengthened by 60 minutes. The laundry can be removed at any time during the anti-crease phase.

SIGNAL

When the drying cycle has finished, an intermittent acoustic signal will sound.

Setting time delay

With the DELAY TIMER button, you can delay the start of a programme by between 30 minutes (30') and a maximum of 23 hours (23h).

1. Select the programme
2. Press the DELAY TIMER button as many times as necessary until the required start delay appears on the multi display, e.g. 12h if the programme is to be started in 12 hours. The DELAY TIMER display is illuminated.

If 23h is displayed and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.

3. To activate the delay timer, press the START/PAUSE button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 12h, 11h, 10h, ... 30' etc).

Until the start of the programme the drum is moved at longish intervals to loosen the laundry.

Starting the programme

Press the START/PAUSE button. The programme is started.
The programme progress display and the display showing the level of dryness show drying progress.

Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.

The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the SIGNAL button) is pressed, Err appears in the multidisplay. The drying programme is not however affected by this (laundry protection).

Removing laundry or loading laundry when necessary

1. Open loading door

⚠ **Warning!** Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close the door securely. Lock must audibly lock.
4. Press the START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying cycle is complete, the END and CREASE GUARD indicators light up. If the SIGNAL button has been pressed, an acoustic signal sounds intermittently.

ⓘ The drying cycles (except for the WOOL programme) are automatically followed by an anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.) If LONG ANTICREASE has been selected, the anti-crease phase is lengthened by 60 minutes.

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry.
4. Turn the programme selector to OFF.

   Important: After each drying cycle
   – Clean the micro-fine filter and fine filter
   – Drain the condensed water container
   (See section "Cleaning and maintenance".)
5. Close door.

Cleaning and maintenance

Cleaning lint filter

To ensure that the dryer works efficiently, the lint filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.

⚠ **Caution!** Never operate the dryer without fluff filters or with damaged or blocked fluff filters.

1. Open door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

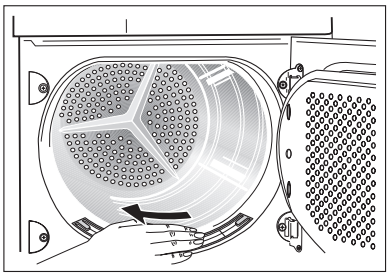

3. Push down unlock button on large mesh filter.
   Large mesh filter elevates.

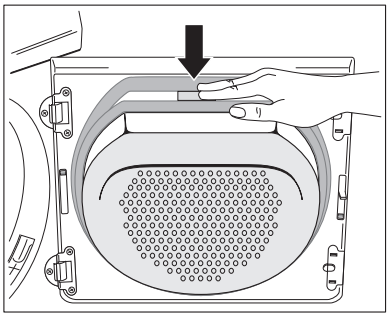

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

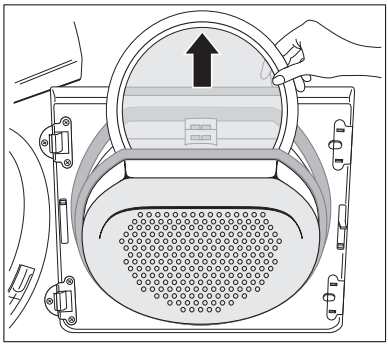

Clean the entire filter area

The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both lugs of the large mesh filter into the brackets on the loading door until they snap into place.

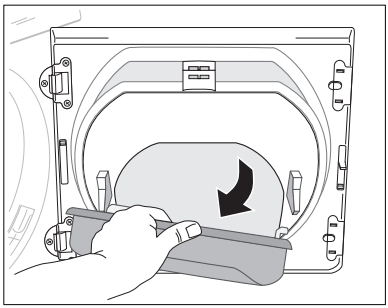

9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

If the fine strainer is not fitted, the large mesh filter will not snap into place and the door cannot be closed.

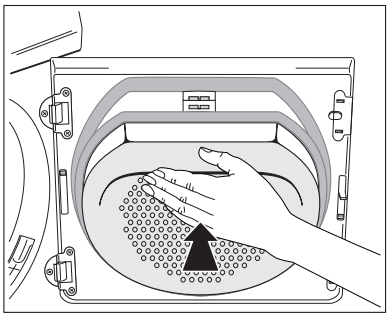

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the water reservoir

Empty water reservoir after every drying cycle.

If the water reservoir is full, an active programme will be interrupted automatically and the EMPTY WATER display will light up. In order to continue the programme, the water reservoir must be emptied.

Warning! The condensed water is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer containing water reservoir completely (1) and pull up the water reservoir's drainage pipe as far as it will go (2).

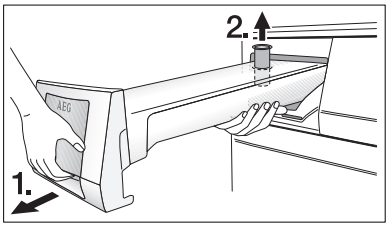

2. Pour condensed water out into a sink or other suitable container.
3. Slide outlet connections in and refit water reservoir.
   If the programme has been interrupted as a result of the water reservoir being full:
   Press the START/PAUSE button to continue the drying cycle.

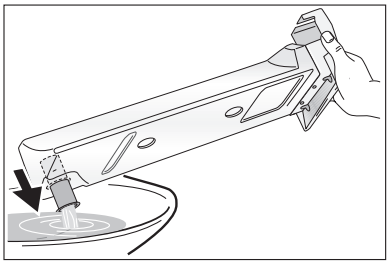

The water reservoir has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.

The condensed water can be used as distilled water, e.g. for steam ironing. However first filter it (e.g. with a coffee filter) to remove any residue and small pieces of fluff.

Cleaning the fluff filter

If the indicator CLEAN FILTER BASE lights up, the fluff filter in the plinth of the appliance must be cleaned.

To protect the heat pump from dirt, the dryer is fitted with a special filter mat, which is located in the filter housing. Here too large amounts of fluff build up over time, which affect the function of the appliance.

- Check the filter mat regularly.
- Clean the filter mat after about every 20th drying cycle or every second month at the latest.

Important

- Operating when the fluff filter is clogged with fluff can damage the dryer. This also increases energy consumption.
- Never operate the dryer without the fluff filters.
- Do not use the dryer without the filter mat. A dirty heat pump requires more energy and can only be cleaned up by means of a costly process.

1. Open door.

2. Open door in plinth: To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.

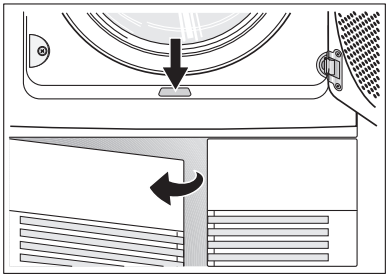

3. Pull filter housing out of the base by the handle.

4. Clean the inside of the door, the fluff filter chamber and the rubber seals of fluff.

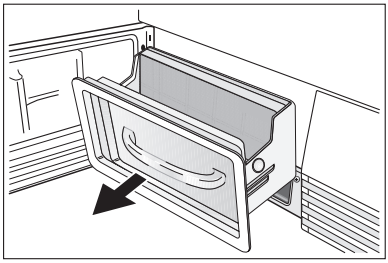

5. Remove fluff from the fluff filter on the floor of the base with a damp hand.

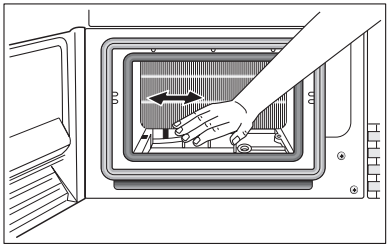

6. To clean the filter mat:
Remove the holder from the filter housing. To do this press the pressure points on the sides and pull the holder up out of the housing.

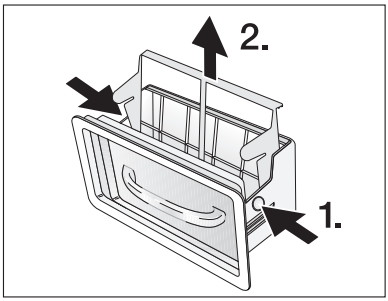

7. Pull the filter mat and its frame up out of the filter housing.

8. Take the filter mat out of the frame and wash it by hand or use a vacuum cleaner, when it is has dried out. Fluff, which has become stuck in the filter mat and has not been removed by washing, does not affect the function.

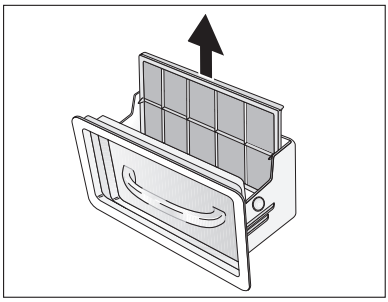

9. Insert the filter mat in the frame and then insert with the frame into the filter housing.

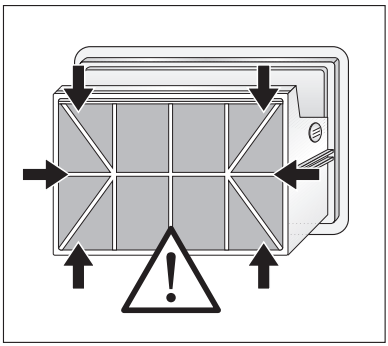

⚠ **Important:** The filter mat must engage tightly with the frame. Check that the mat is sitting snuggly in the frame, especially after inserting it into the filter housing.

10. Insert holder into the filter housing.

11. As necessary, approx. once every 6 months, remove the fluff from the heat exchanger using the sponge supplied. When doing this, please use rubber gloves.
Tip: The fluff can be removed more easily if it is first dampened e. g. with a laundry dampener.

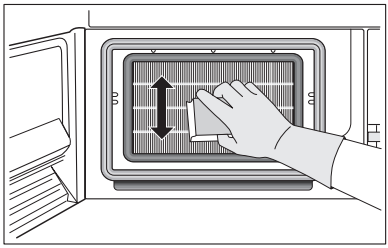

12. Re-insert filter housing with holder and filter mat in the base of the appliance.
Note: If the holder and filter mat are not inserted in the filter housing, the filter housing cannot be pushed into the base of the appliance.

13. Close door in plinth.

ℹ The indicator CLEAN FILTER BASE only goes out when the programme knob has been positioned to OFF.

Cleaning the drum

⚠ **Caution!** Do not use abrasives or steel wool to clean the drum.

ℹ Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a damp cloth, which has been soaked in water and a little vinegar, to wipe the inside of the drum and drum ribs.

Clean operating screen and housing

⚠ **Caution!** Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

What to do if ...

Troubleshooting by yourself

If, during operation, the error code (E plus number or letter) appears on the multi-display: Switch the machine off and on again. Reset programme. Press the START/PAUSE button
If the error is still displayed, please inform your local Service Force Centre and quote the error code.

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START/PAUSE button?	Press the START/PAUSE button again.
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Overview of programmes" section).
	Lint filters clogged.	Clean lint filters.
	Fluff filter clogged.	Clean fluff filter.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
		Make an adjustment using the INTENSITY function (see chapter "Drying, Selecting additional functions").
Loading door does not close.	Fine strainer not in place and/or large mesh filter not locked in place.	Install fine strainer and/or snap large mesh filter into place.
When a button is pressed, Err appears in the multi-display.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF. Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to LIGHT or to any programme.
	Defective light bulb.	Replace light bulb (see next section).

Problem	Possible cause	Remedy
PROGRAMME TIME display changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process; this is not a machine fault.
Programme inactive, EMPTY WATER display illuminated.	Condensate tank is full.	Empty condensate tank, then start programme with START/ PAUSE button.
Drying cycle ends shortly after programme starts. END display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. INTENSIVE DRY instead of STORAGE DRY).
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“).	Lint filter clogged.	Clean lint filter.
	Fluff filter clogged.	Clean fluff filter.
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.

Changing the bulb for interior lighting

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from the Customer Care Department, ET no. 112 552 000-5.

Important: When the appliance is switched on, the interior lighting switches itself off after 5 minutes when the door is open.

Warning: Do not use standard bulbs! These develop too much heat and may damage the appliance.

Warning: Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to “Description of machine” section.)
2. Replace defective bulb.
3. Screw cover back down.

Warning: For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

Programming options

Objective	Implementation
Permanently programme in the audible signal which reminds you that the programme is complete.	**1.** Turn the programme selector to any programme. **2.** Press the SIGNAL button and hold down for approx. 5 seconds. A brief signal sounds several times. The SIGNAL display flashes several times. The setting is permanently programmed. The setting is cancelled as described under 1 and 2.
Adjust "level of dryness" detection: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.	**1.** Turn the programme selector to any programme. **2.** Press the SILK and SIGNAL buttons at the same time and hold down for approx. 5 seconds. The current setting appears on the multi-display: – C0: Setting for drier laundry – C1: Standard setting – C2: Setting for damper laundry **3.** Press the START/PAUSE button until the setting required appears on the multi-display. **4.** Turn the programme selector to OFF. The setting is permanently programmed.
To deactivate the EMPTY WATER display when using an external drain for the condensed water.	**1.** Turn the programme selector to any programme. **2.** Press the WOOL and LONG ANTICREASE buttons at the same time and hold down for approx. 5 seconds. The multi-display briefly displays "0" The EMPTY WATER display is permanently deactivated. The setting is cancelled as described under 1 and 2; the multi-display however briefly displays " 1" (rather than "0").

Technical data

CE This appliance conforms with the following EU Directives:
– 73/23/EEC dated 19.02.1973 Low Voltage Directive
– 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
– 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 60 kg
Loading volume (depends on programme) [1)]	max. 6 kg
Energy consumption in accordance with IEC 1121 s. e. (6 kg of cotton, pre-drained at 1000 rpm, COTTONS STORAGE DRY programme)	2,1 kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY [1)]	6	2,1
COTTONS HAND IRON [1)]	6	1,7
EASY CARES STORAGE DRY [2)]	3	0,9

1) pre-drained at 1000 rpm
2) pre-drained at 1200 rpm

⚠ Installation safety instructions

- Before first starting up, all parts of the transport safety devices must be removed. The machine may otherwise be damaged.
- Before using for the first time, ensure that the nominal voltage and type of current specified on the machine rating plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the rating plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on deep pile carpets. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- The tumble dryer must be level when installed.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Transporting the appliance

⚠ **Important:** Only tip the appliance on its left side to transport (see illustration), if it cannot be transported in an upright position.

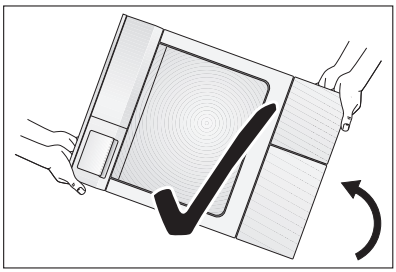

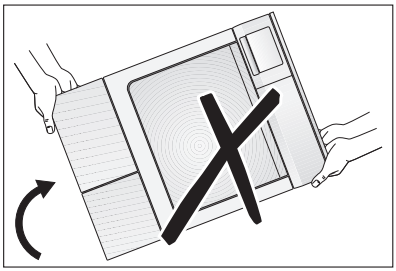

Removing transport safety packaging

⚠ **Caution!** Before first using all parts of the transport packaging must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

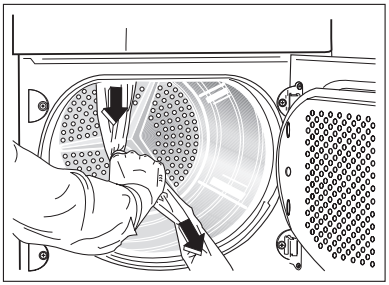

3. Remove foil hose and polystyrene padding from the machine.

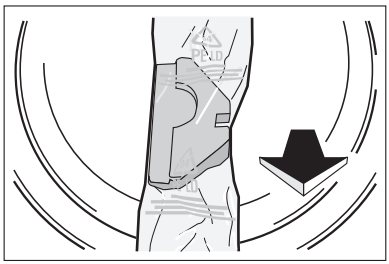

Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

⚠ **WARNING – THIS APPLIANCE MUST BE EARTHED.**
The manufacturer declines any liability should these safety measures not be observed.
Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1363) fuse must be used.

The power supply cable must be accessible after installing the machine.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

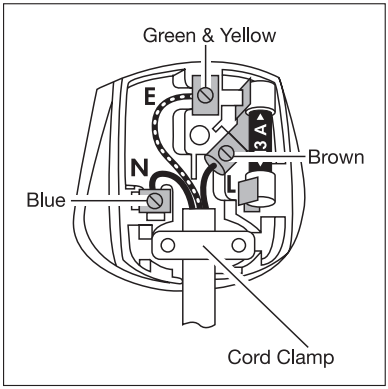

- The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol ⏚ or coloured green and yellow.
- The wire coloured blue must be connected to the terminal "N" or coloured black.
- The wire coloured brown must be connected to the terminal marked "L" or coloured red.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

⚠ **WARNING!** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

Permanent Connection

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.
The switch must not break the yellow and green earth cable at any point.

This appliance complies with the requirements laid out in the EEC Directive 76/899.

Voltage 240 V AC: Fuse rating 13 amps

See rating plate for further information.

This appliance meets VDE requirements.

Particular regulations of local electricity authorities must be observed. This appliance conforms to EEC Directive No. 82/499/EWG on radio interference.

⚠ **WARNING!** Repairs to electrical appliances must only be carried out by trained personnel. Improper repairs may lead to serious risks for the user.

Door reversal instructions

Warning! The door may only be reversed by a specialist.
If necessary, please contact your local Service Force Centre.
Warning! Before reversing the door, disconnect the mains plug; with a permanent connection: remove the fuse.

1. Open door.
2. Unscrew hinge A from the front of the machine and take off the door.
3. Carefully pry off cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Unfasten locking block D from the snap-on fixture, take out and reinsert on the other side, having rotated the block through 180°.
5. Unscrew hinge A from the door, rotate through 180°, reinsert on the opposite side and screw down.

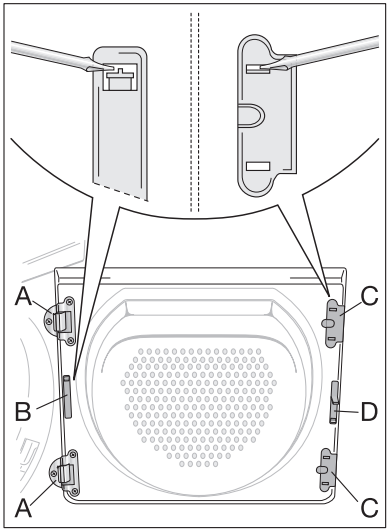

6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.
7. Unscrew cover plates E from the front of the machine, rotate through 180, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
10. Transfer door lock F to the opposite-side and screw down.
11. Fix cover G on to the other side and allow the snap-in button to lock in place.

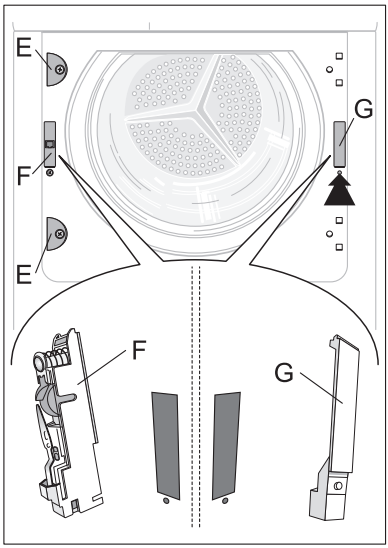

12. Insert door and hinges into recesses on the front of the machine and screw down.

Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and dryer:

These intermediate installation kits can be used to arrange the dryer and an automatic AEG-Electrolux washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.
Version to be supplied:
– with extractable stacker plate 916.018 903

Installation kit for external condensate drain

Installation kit (125 122 510) for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Refer to the "Programme options" section for how to deactivate the EMPTY WATER display.
Max. displacement height: 1m from the base of the dryer; max. displacement length: 3m

Warranty conditions

Great Britain

Standard guarantee conditions
We, AEG, undertake that if within 12 months of the date of the purchase this AEG appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our discretion repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity or gas supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions
This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of AEG manufacture which are not marketed by AEG.

European Guarantee
If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Luton	+44 (0) 8705 350 350

Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.
For the address of your local Service Force Centre and further information about Service Force, please visit the website at
www. serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading „What to do if..."

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

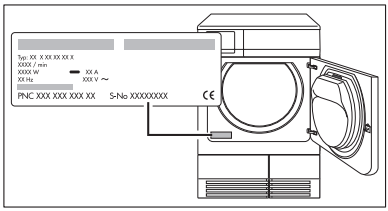

Customer Care
For general enquiries concerning your AEG appliance, or for further information on AEG products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.aeg.co.uk.**

Customer Care Department
Major Appliances
AEG Domestic Appliances
Addington Way
Luton
Bedfordshire, LU4 9QQ
Tel: 08705 350350 (*)

For Customer Service in the Republic of Ireland please contact us at the address below:
AEG/ Electrolux Group (Ire) Ltd
Long Mile Road/ Dublin 12
Republic of Ireland
Tel: +353 (0) 1 4090754
Email: service.eid@electrolux.ie

(*) Calls may be recorded for training purposes

***From the Electrolux Group**. The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

http://www.aeg-electrolux.de

© Copyright by AEG

125984510-01-080306-01 Subject to change without notice